





NAVODILO ZA OGREVANJE S KLIMO/ INSTRUCTIONS FOR HEATING WITH AIR CONDITIONING/ ISTRUZIONI PER RISCALDAMENTO CON ARIA CONDIZIONATA


1. Pritisnite tipko IZBIRA DELOVANJA, da se prikaže simbol  (GRETJE) na prikazovalniku.

First Press OPERATION MODE to display the symbol  (HEAT) on the display.

Premere FUNZIONAMENTO Premere MODE per visualizzare il simbolo  (HEAT) sul display.

2. Nastavite želeno hitrost ventilatorja s tipko 

Set the desired fan speed by pressing 

Impostare la velocità di ventilazione desiderata premendo 

3. Nastavite želeno temperaturo s tipko TEMEPERATURA

Set the desired temperature by pressing the button C

Impostare la temperatura desiderata premendo il bottone C

4. Tipka za vključi/izključi

Button on / off

Pulsante on / off

